

Center Display Screen - Vehicles With: 10.1 Inch Center Display Screen

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: Left hand drive (LHD) shown, right hand drive (RHD) similar.


All vehicles

1. Remove the floor console.
Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Remove the media hub.
Refer to: [Media Hub](#) (415-00 Information and Entertainment System - General Information, Removal and Installation).
3. Position the weatherstrip aside, release the clips and remove the instrument panel RH side trim panel.
Use the General Equipment: Interior Trim Remover

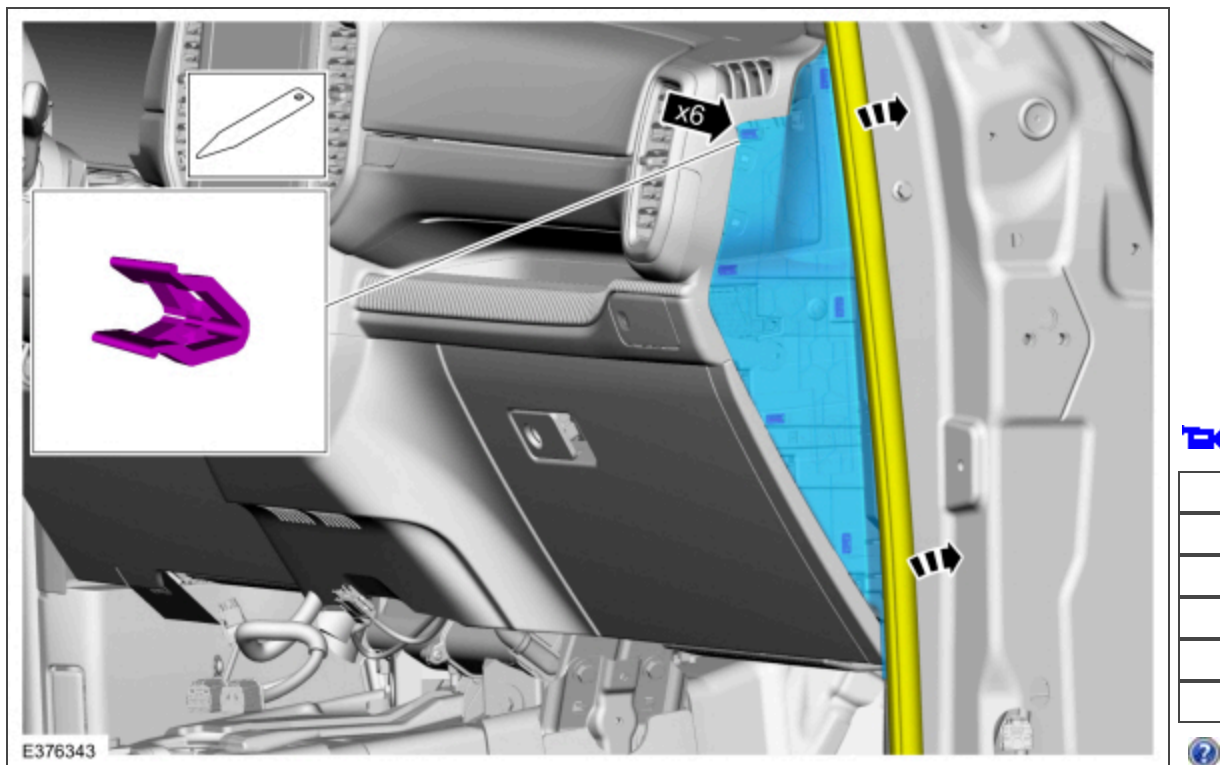


Vehicles equipped with an upper glove compartment


4. Remove the screw.
Torque: 2.5 Nm (22 lb.in)

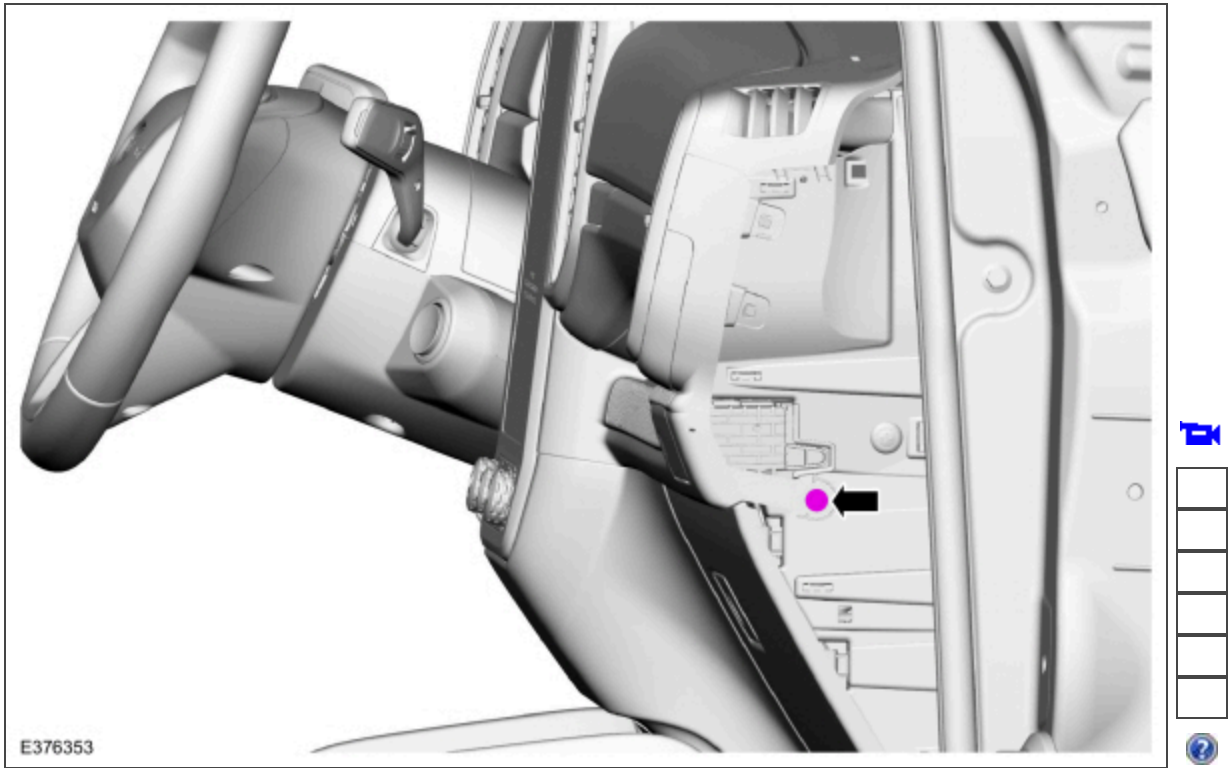

5. Open the upper storage bin.

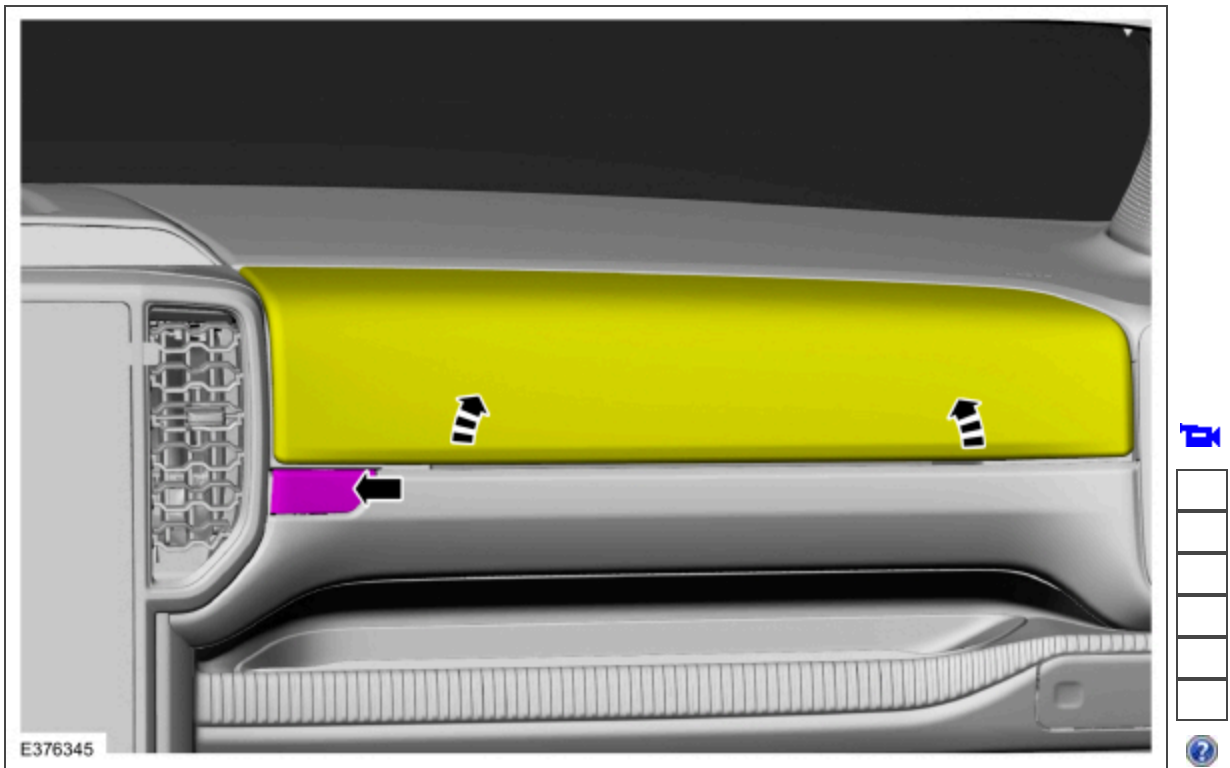


6. Remove the screws.
Torque: 2.5 Nm (22 lb.in)

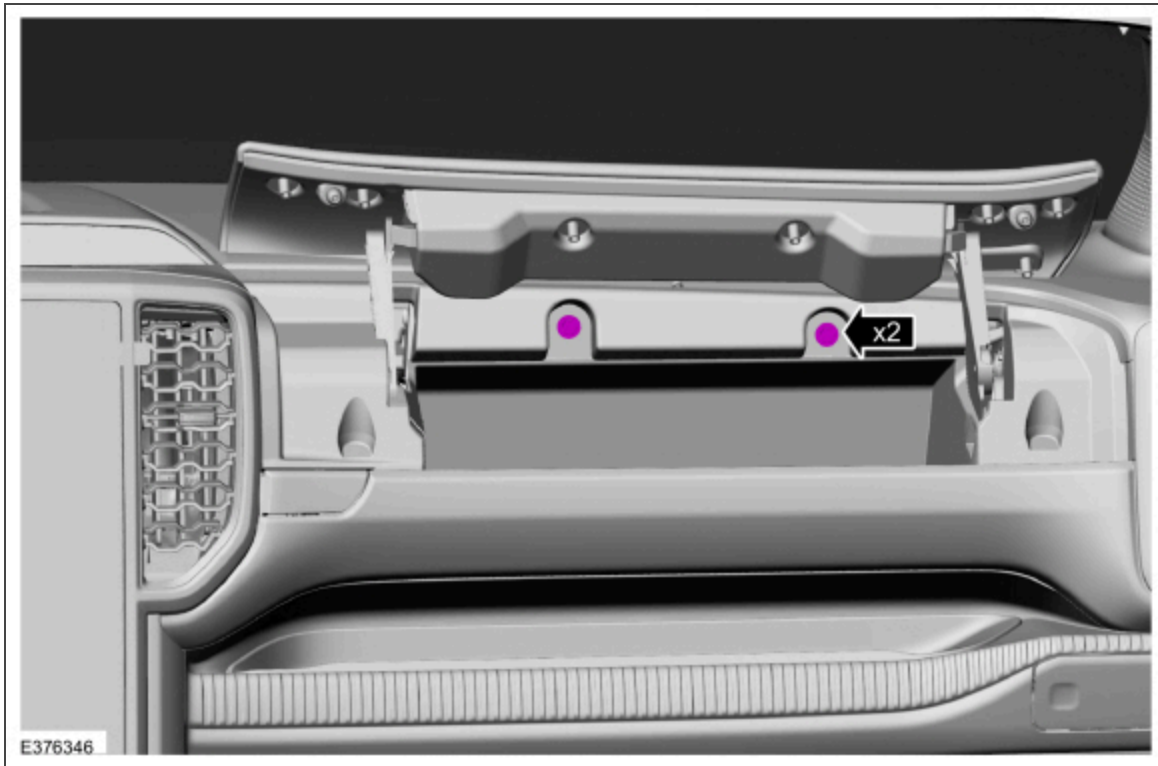

E376346



7. Release the side tabs, separate the clips and remove the storage bin.
Use the General Equipment: Interior Trim Remover

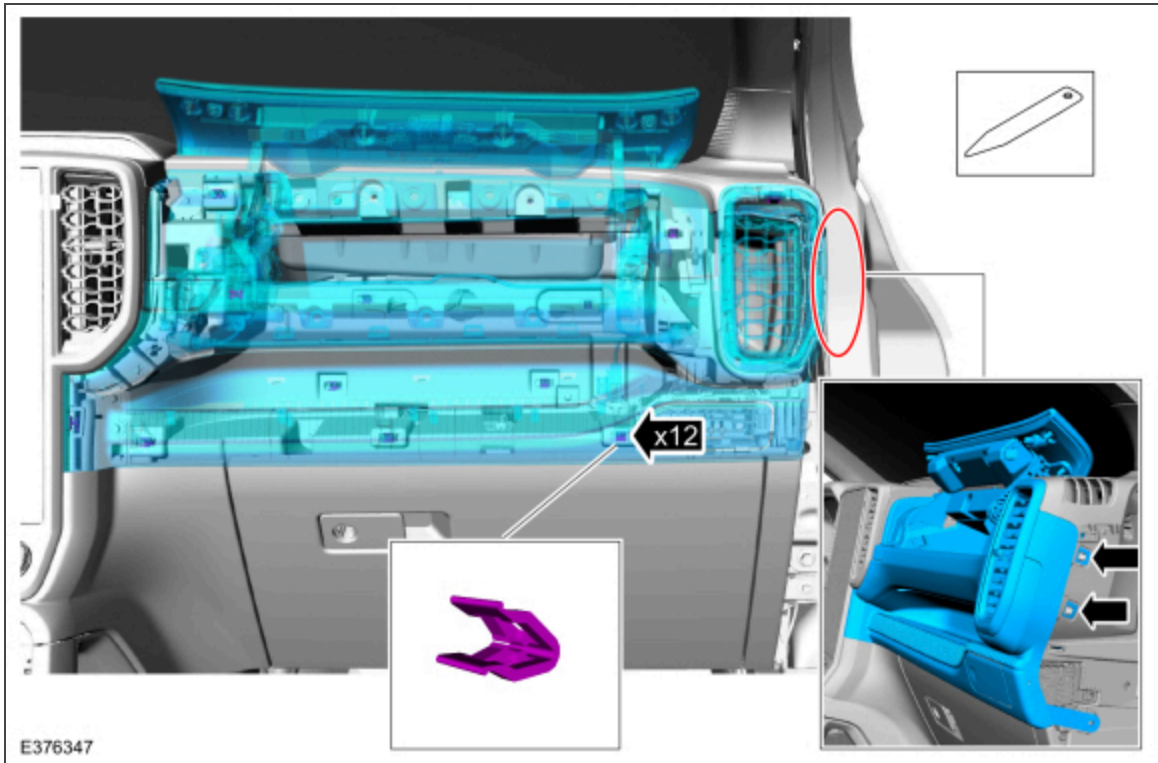


E376347




Vehicles not equipped with an upper glove compartment

8. Release the clips, separate the trim pins, pull forward and then up and release the hooks and remove the RH upper instrument panel trim plate.
Use the General Equipment: Interior Trim Remover

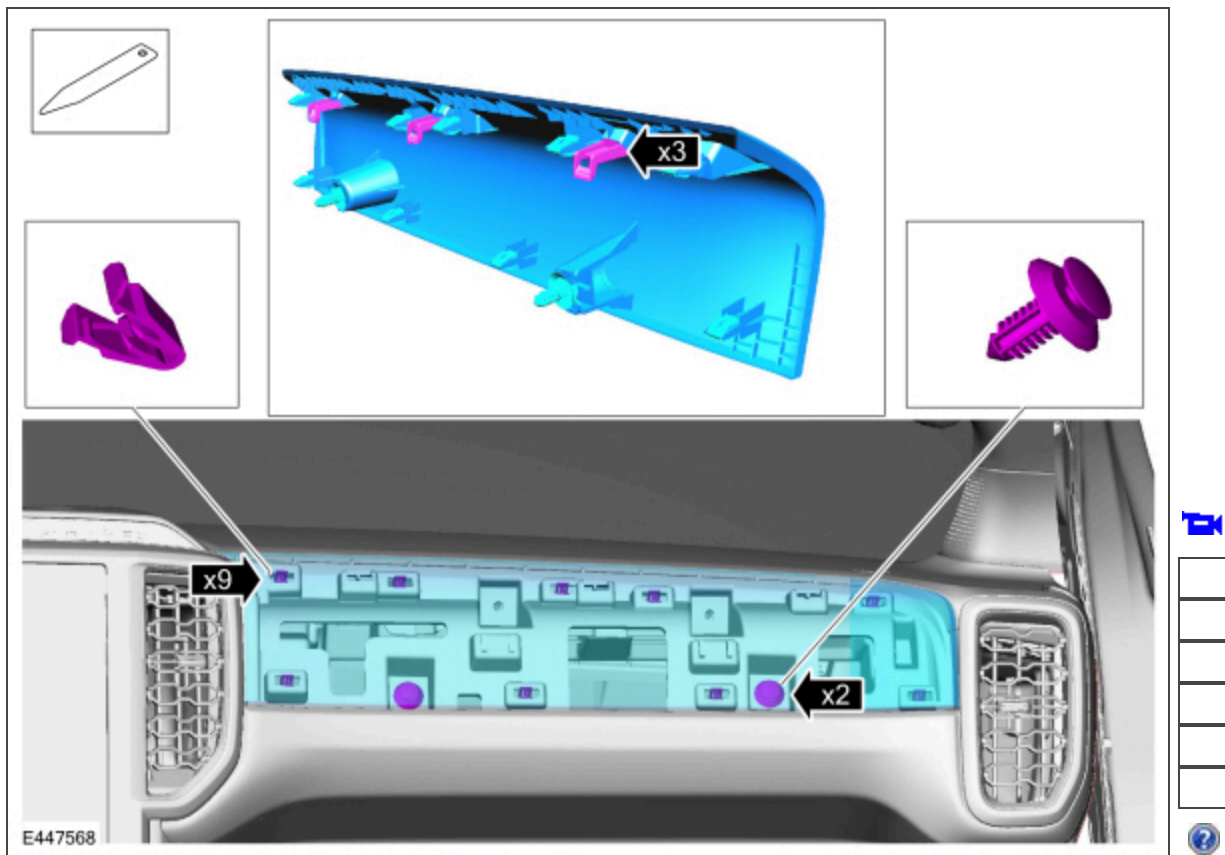


9. Remove the screws, separate the clips, release the tabs and remove the RH register assembly.
Torque: 2.5 Nm (22 lb.in)

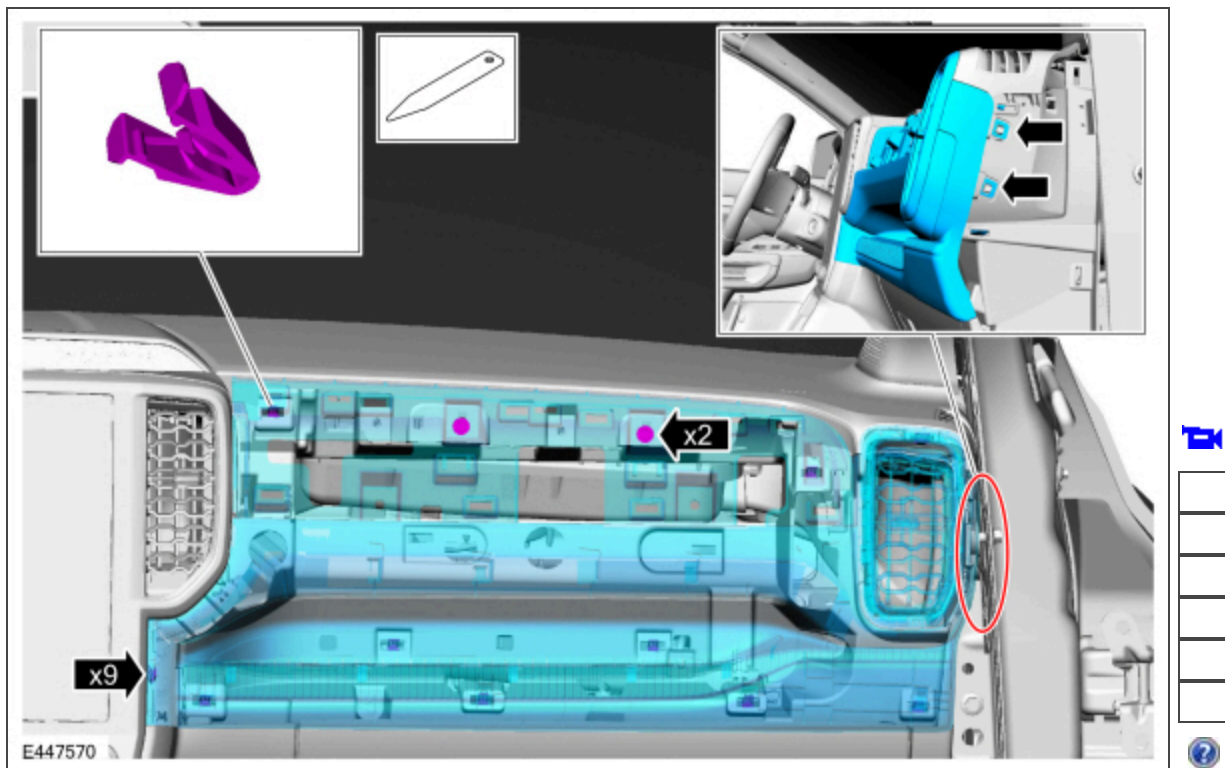


All vehicles


10. Position the weatherstrip aside, release the clips and remove the instrument panel LH side trim panel.
 Use the General Equipment: Interior Trim Remover

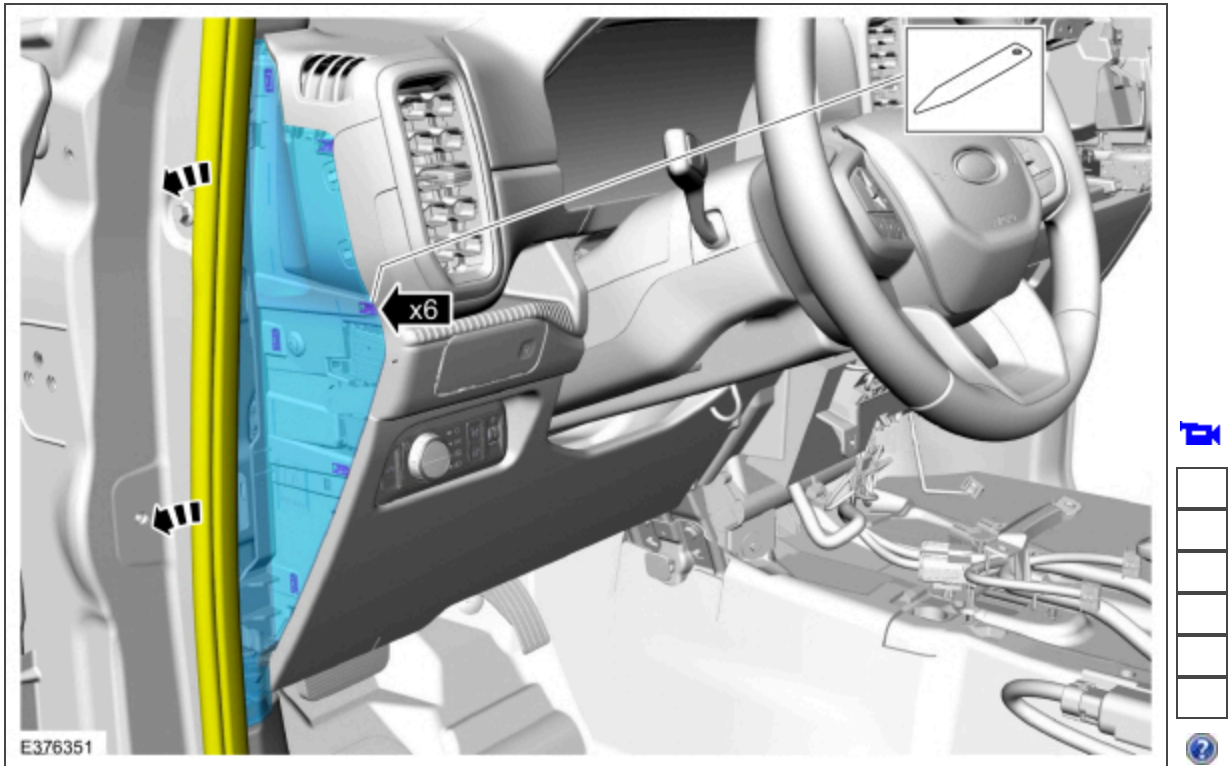

11. Remove the screw.
Torque: 2.5 Nm (22 lb.in)

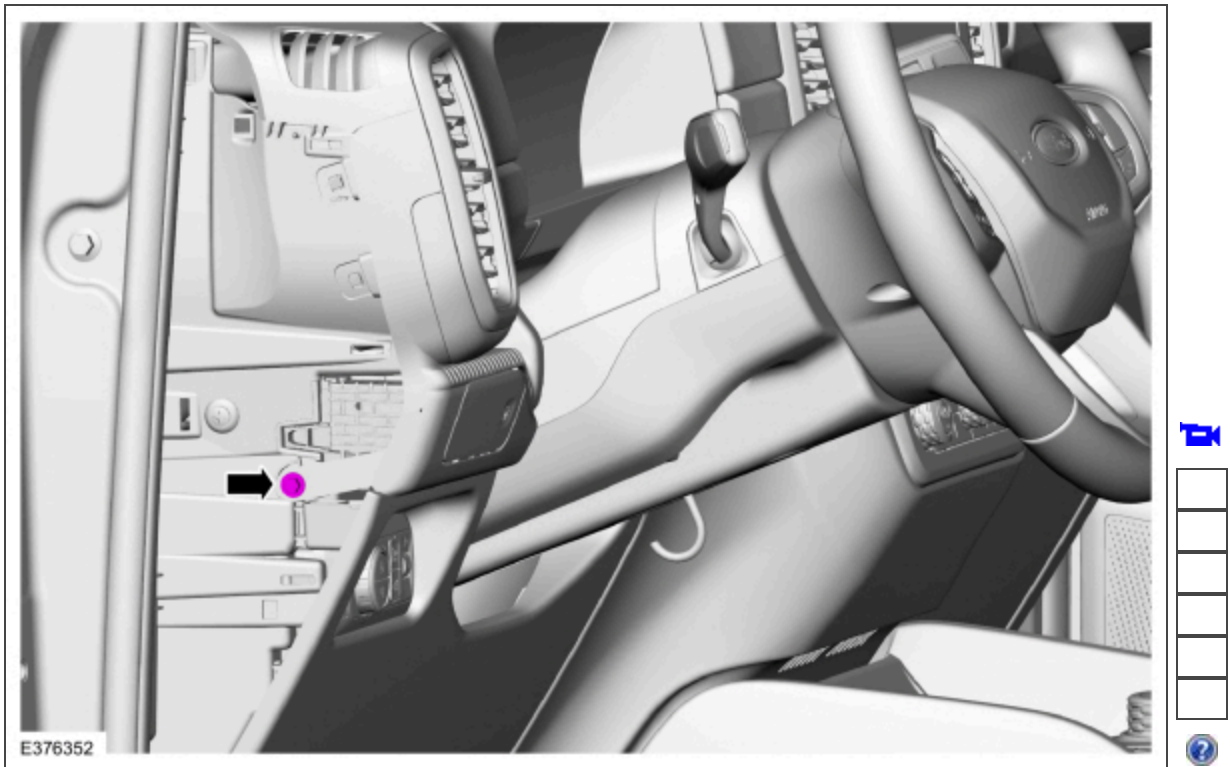

12. Release the clips, disconnect the electrical connector and remove the steering column close out panel.
Use the General Equipment: Interior Trim Remover

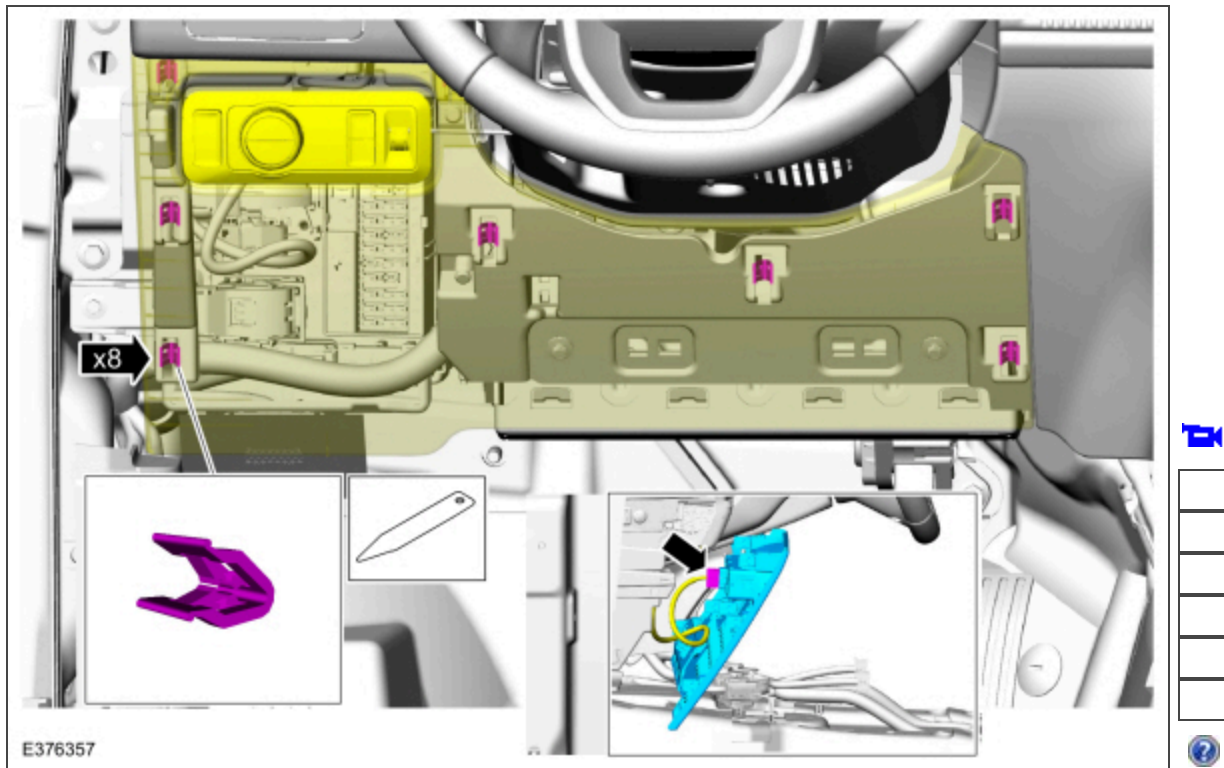


13.


Remove the instrument cluster trim panel.

1. Disconnect and separate the electrical connector
2. Separate the front edge of the steering column gap hider.
3. Release the tabs.
4. Release the clips.


Use the General Equipment: Interior Trim Remover

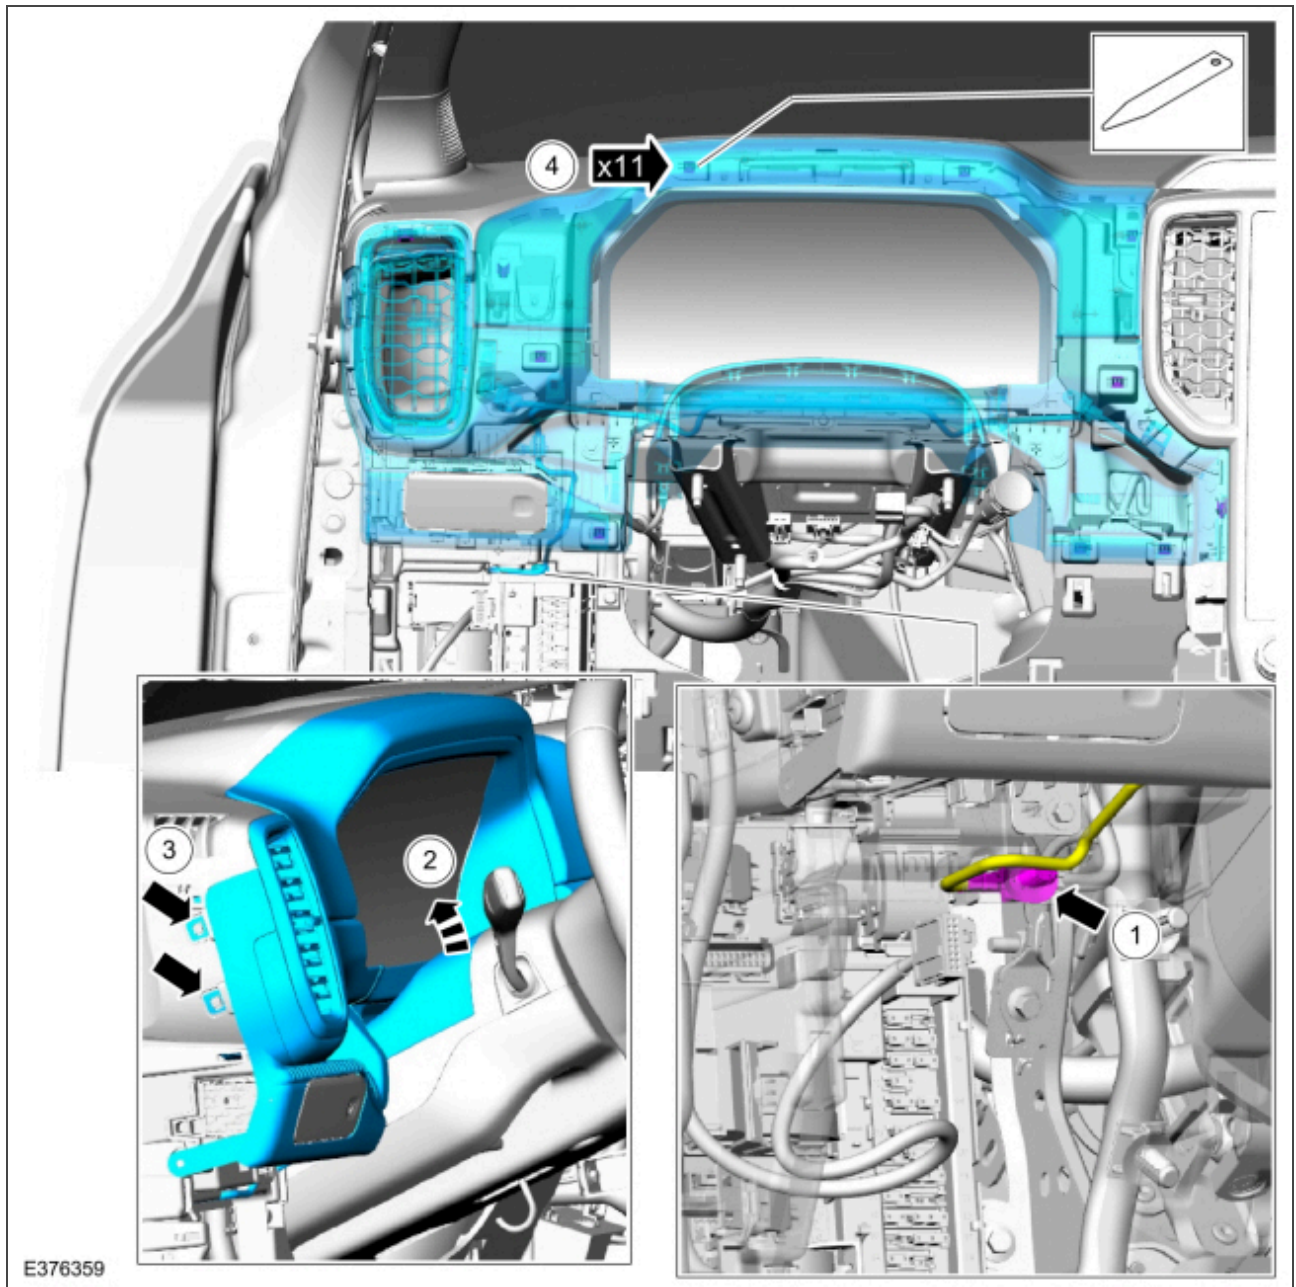


14. Remove the bolts, separate the clips and remove the lower centerstack trim panel.
Use the General Equipment: Interior Trim Remover
Torque: 2.5 Nm (22 lb.in)

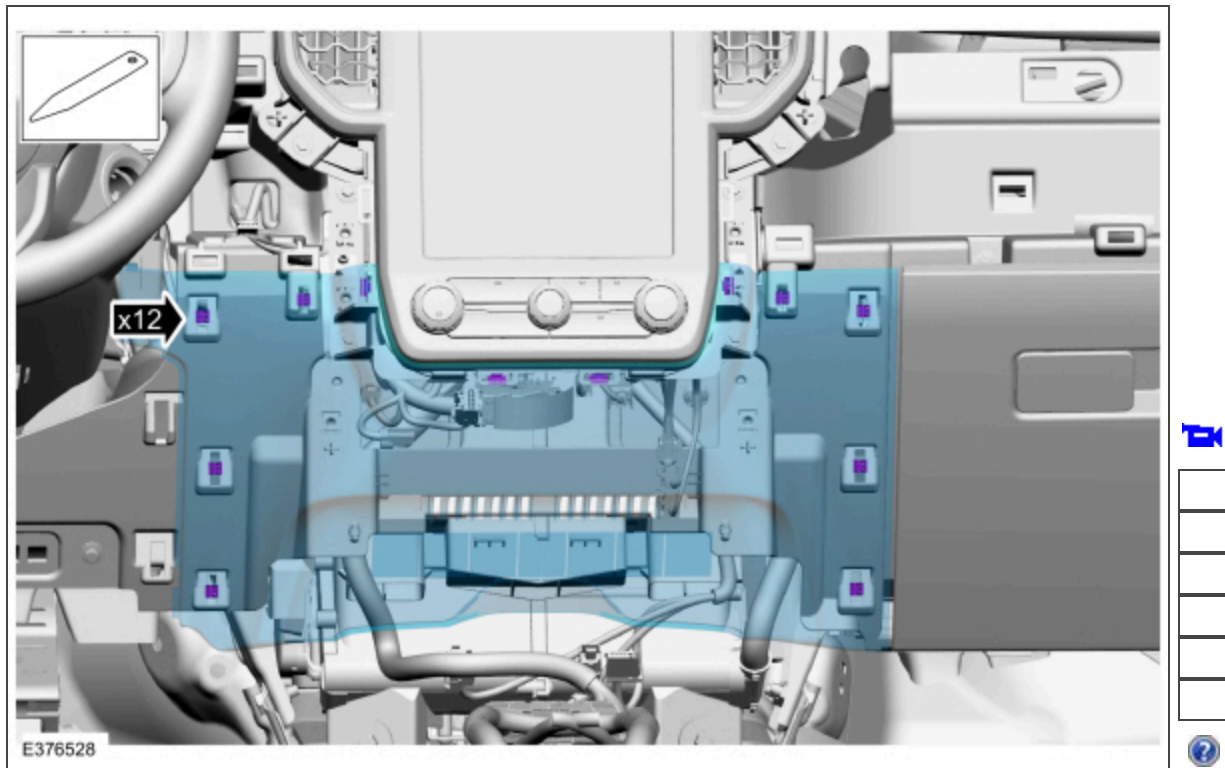

15. Release the clips and remove the center screen bolt trim panel.
Use the General Equipment: Interior Trim Remover

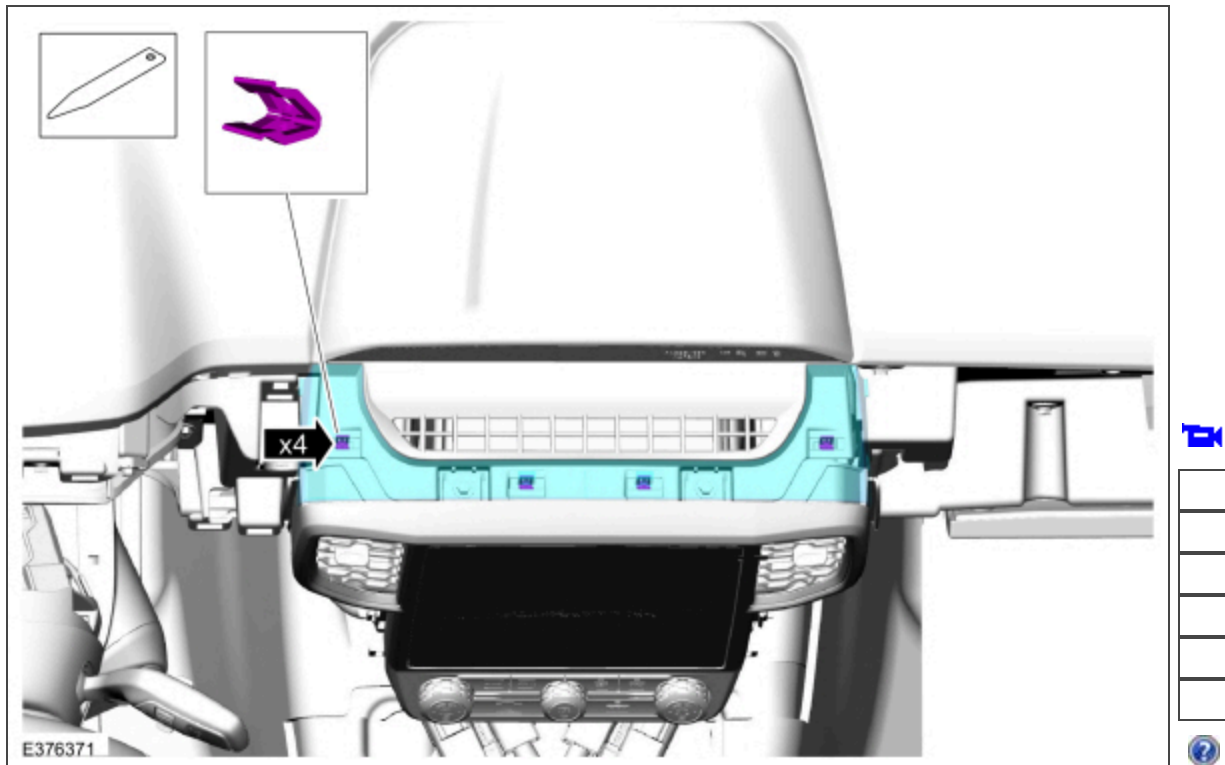

16. Remove the bolts.
Torque: 2.5 Nm (22 lb.in)

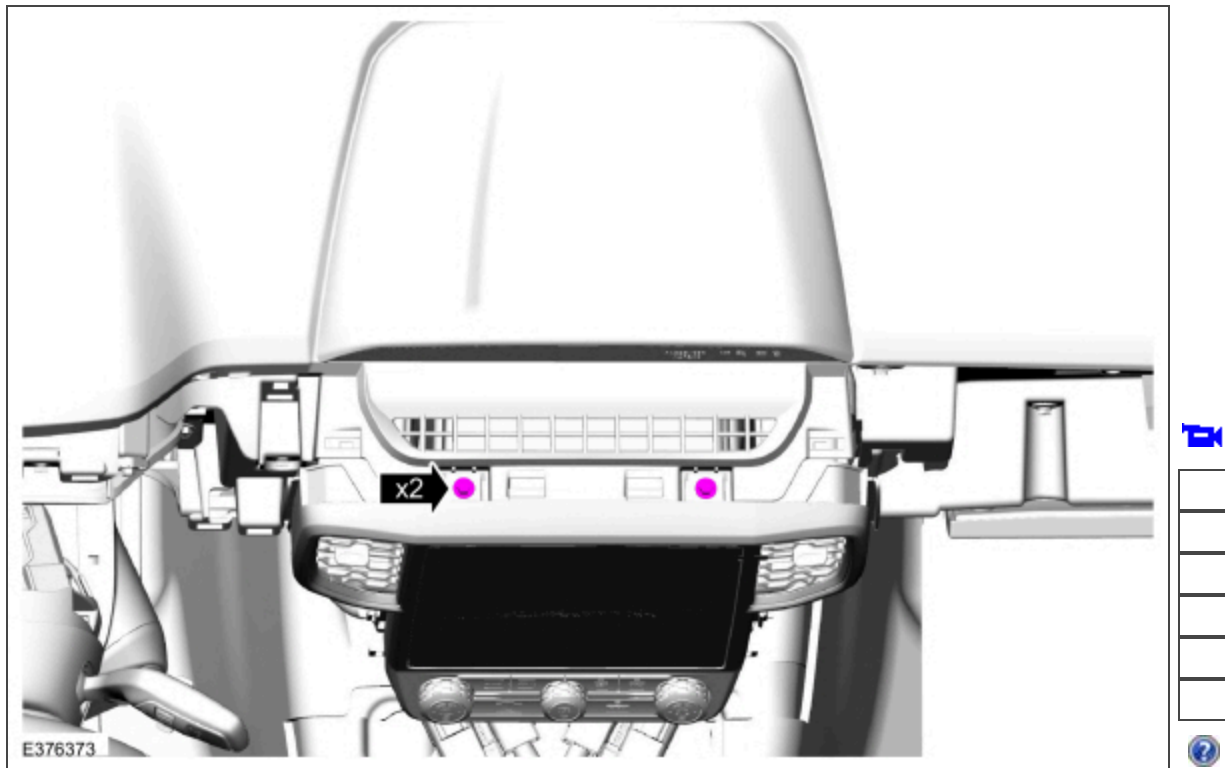


17. **NOTICE:** Do not pull on the wire harness to disconnect/connect the connector or damage to the connector/wire harness will occur.


NOTE: The following step is the correct method to disconnect the LVDS cable connector in the following step.

Disconnect the LVDS cable connector.

- Using needle nose pliers, release the LVDS cable connector retaining tabs.
- Disconnect the LVDS cable connector.
- Position the LVDS cable connector aside.

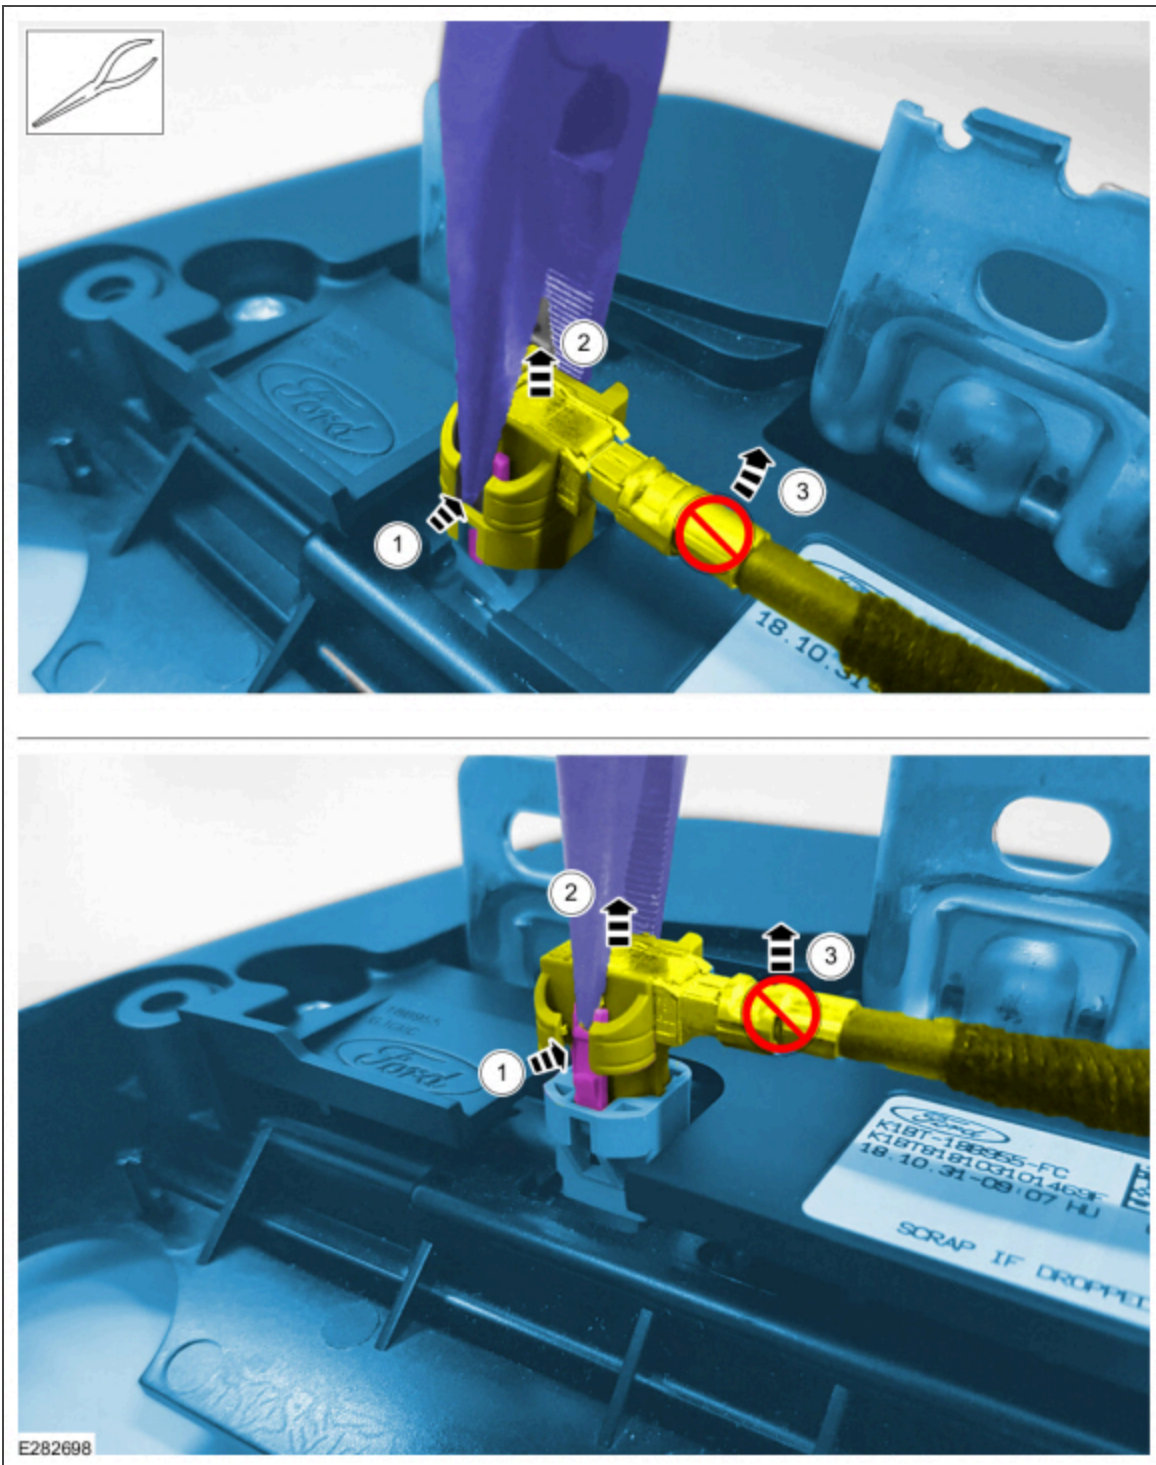


18. Remove the bolts, position the center screen out, disconnect the electrical connectors and remove the center and vent assembly.
Torque: 2.5 Nm (22 lb.in)

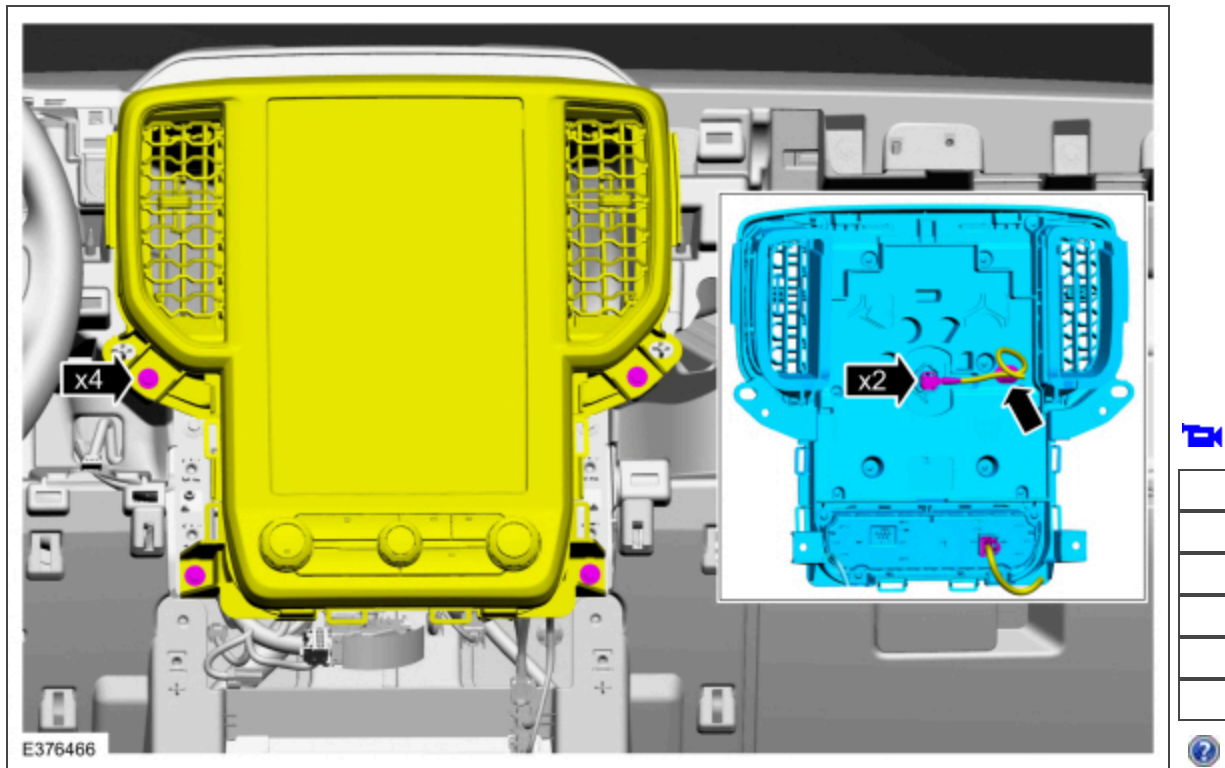

19. **NOTE:** Carry out the following step only if installing a new center display screen.

Remove the screws and the FCIM .

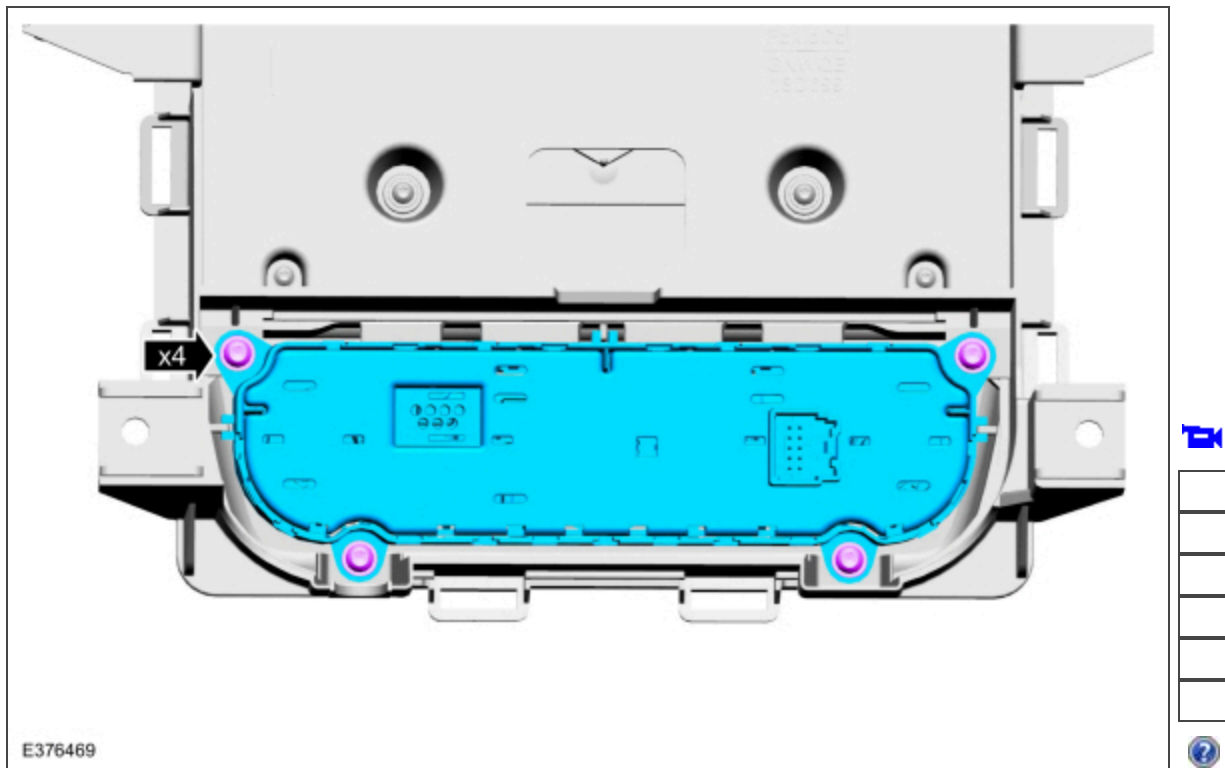

Installation

1. To install, reverse the removal procedure.

