

## Ambient Air Temperature Sensor


### Special Tool(s) / General Equipment

Flat-Bladed Screwdriver

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1.
  - Using a suitable tool, pry and detach the ambient air temperature sensor bezel from the passenger side exterior mirror housing.
  - Use the General Equipment: Flat-Bladed Screwdriver
  - Disconnect the ambient air temperature sensor electrical connector and remove the ambient air temperature sensor.

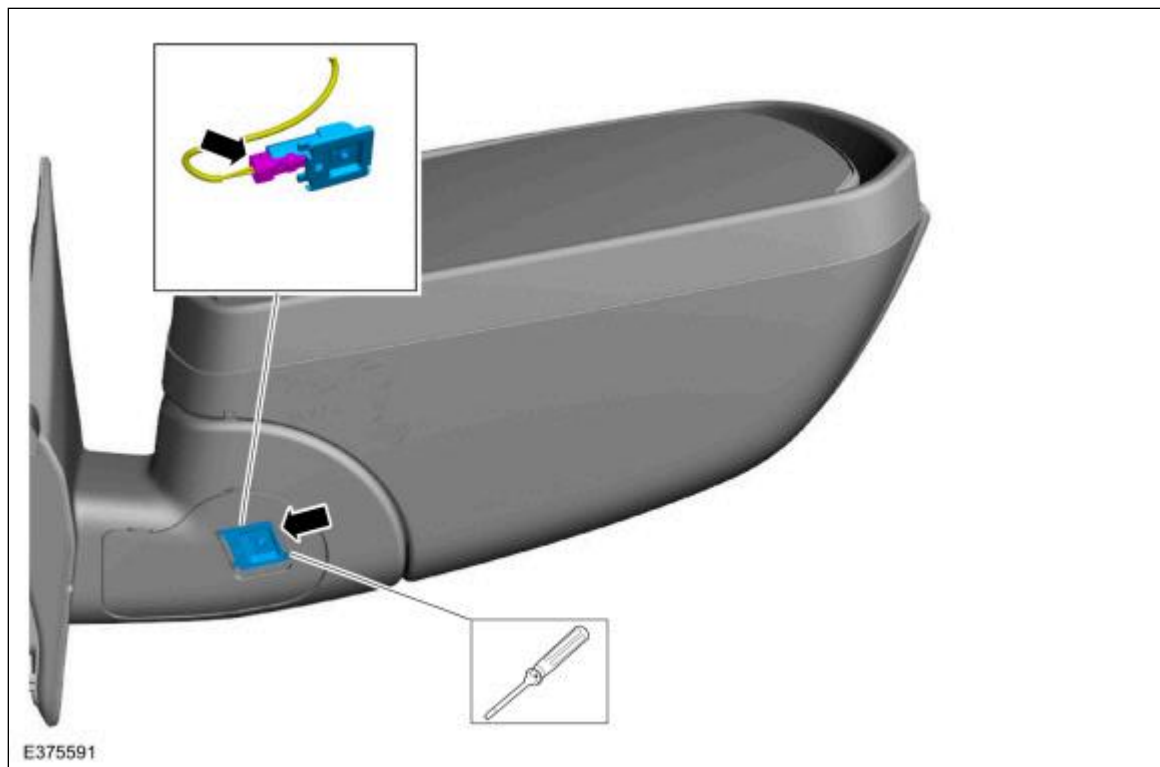

### Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary if replacing the ambient air temperature sensor.

If replacing the ambient air temperature sensor a reset must be performed.  
Refer to: [Reset the Outside Air Temperature Sensor Learned Values](#) (412-00 Climate Control System - General Information, General Procedures).