

Instrument Panel Cluster (IPC)

Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Right hand drive (RHD) shown, Left hand drive (LHD) similar.



1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the IPC following the on-screen instructions. Record the odometer value from the original IPC . If the odometer value cannot be obtained from the IPC (display failure), perform the diagnostic routine. If the value cannot be obtained after the diagnostic routine, the customer should supply the approximate odometer value.



2. Fully extend and lower the steering column.

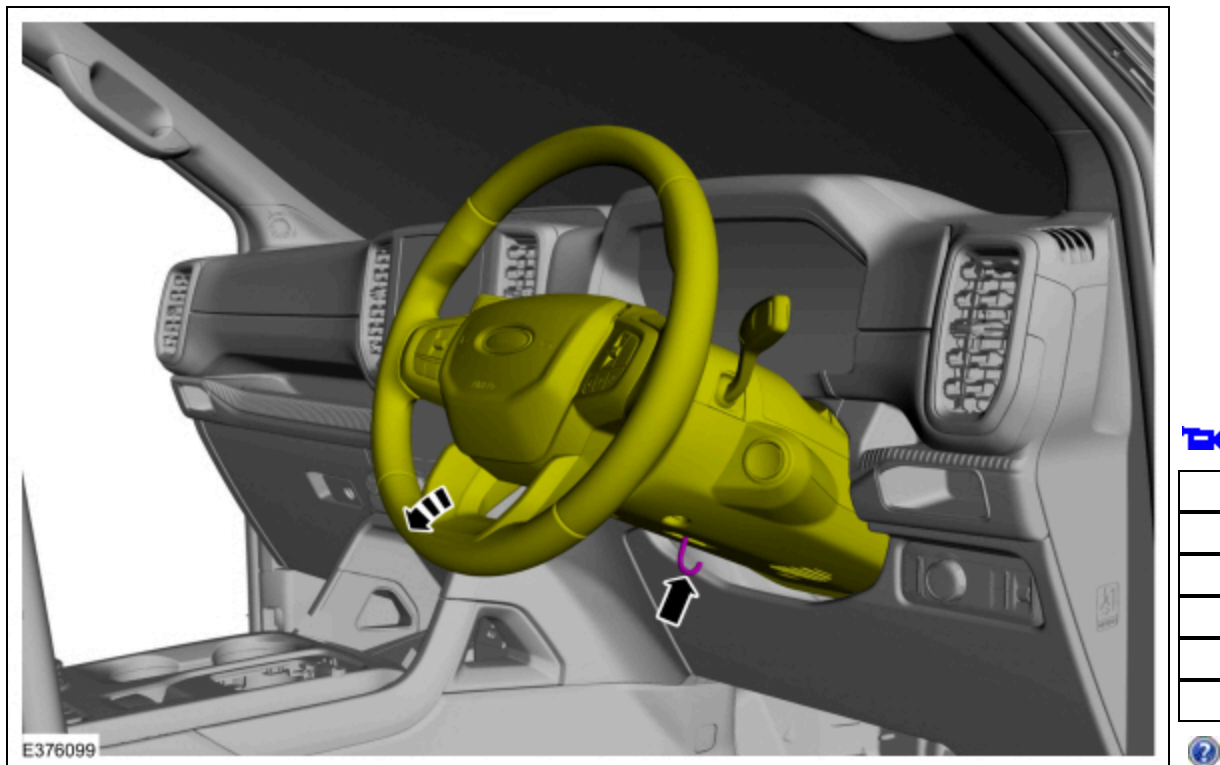

 
3. Position the weather strip aside.

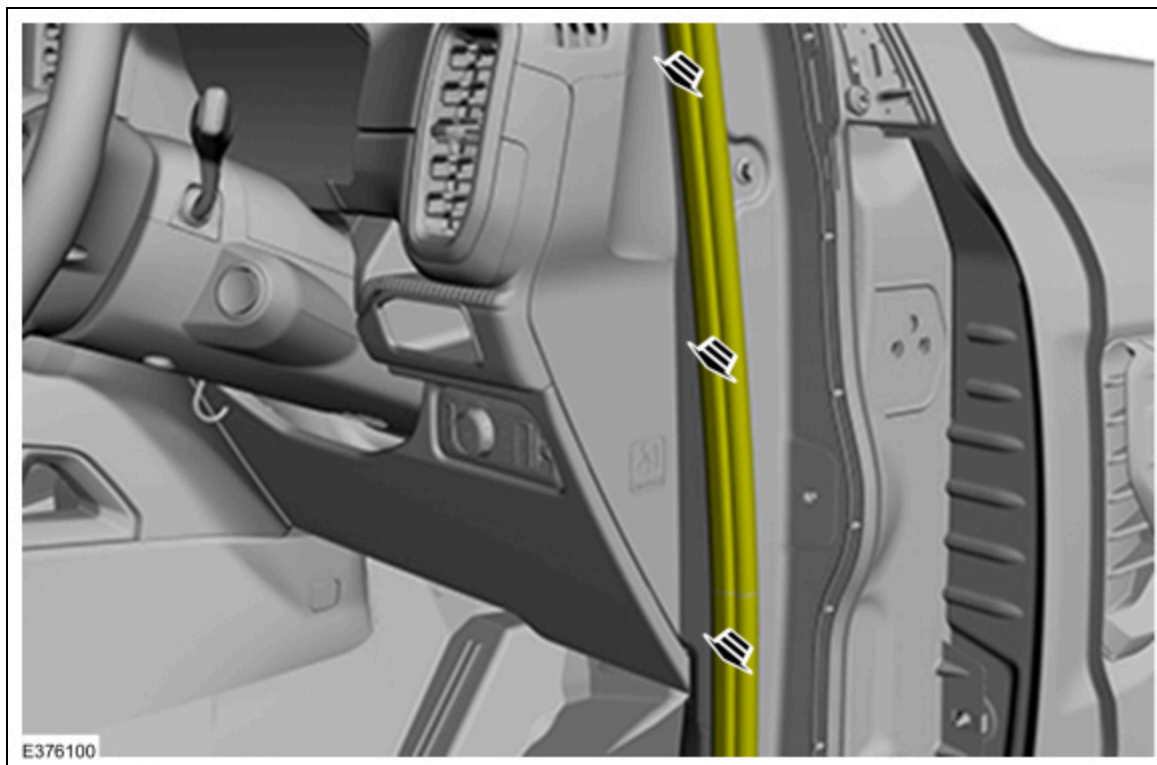

 
4. Release the clips and remove the end cover trim panel.
Use the General Equipment: Interior Trim Remover

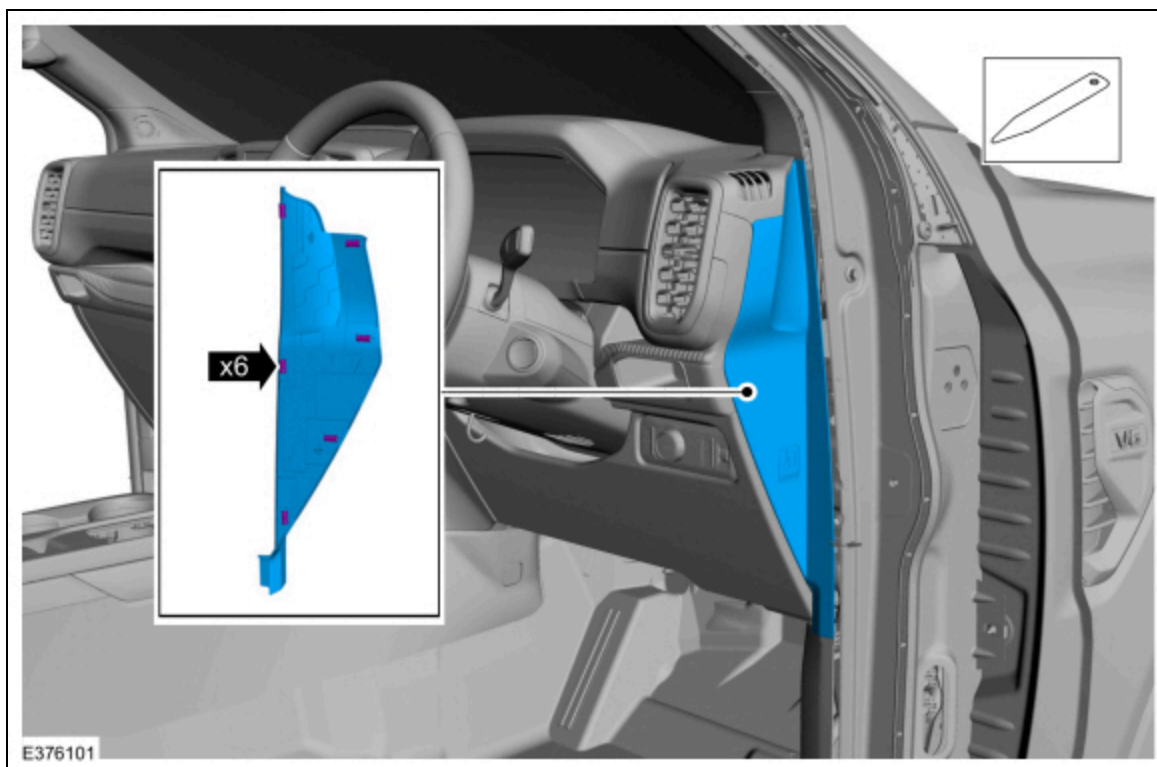



5. Release the tabs, clips and remove the gap hider from the upper steering column shroud.
Use the General Equipment: Interior Trim Remover

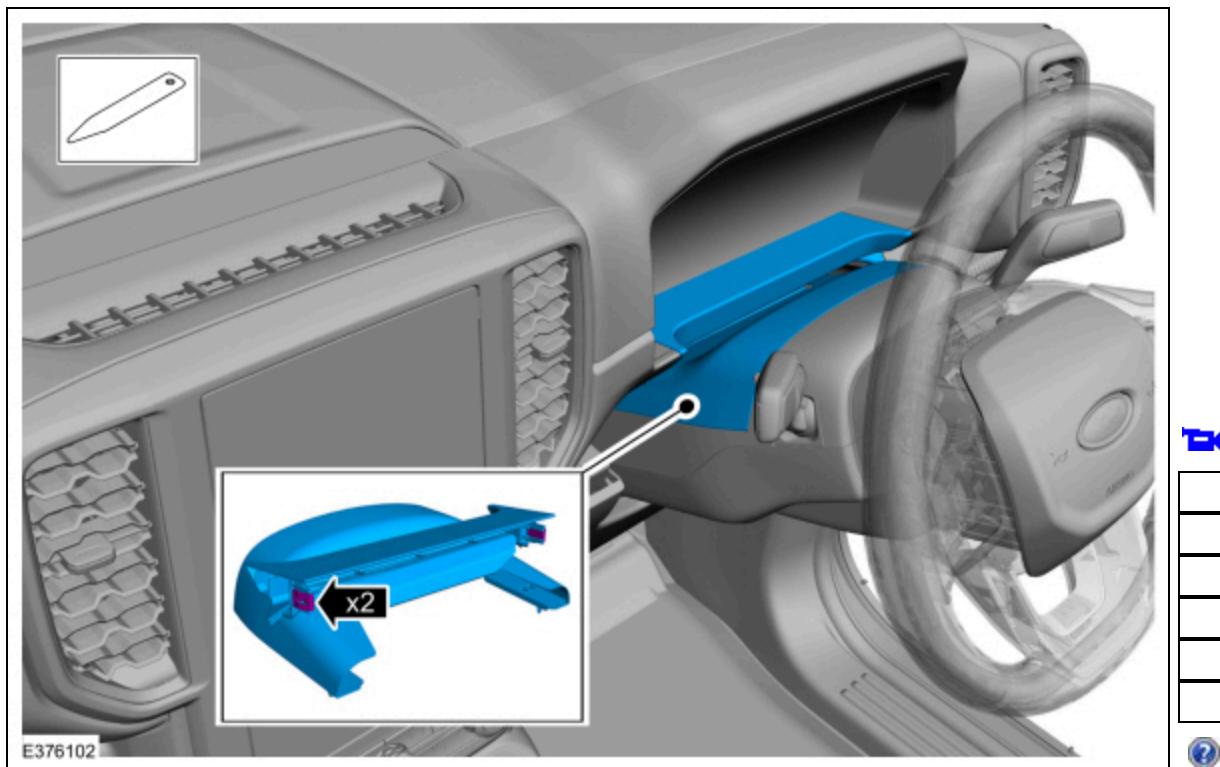



6.
 - Release the lower steering column closeout panel clips.
 - Use the General Equipment: Interior Trim Remover
 - Disconnect the electrical connector and remove lower steering column closeout panel.

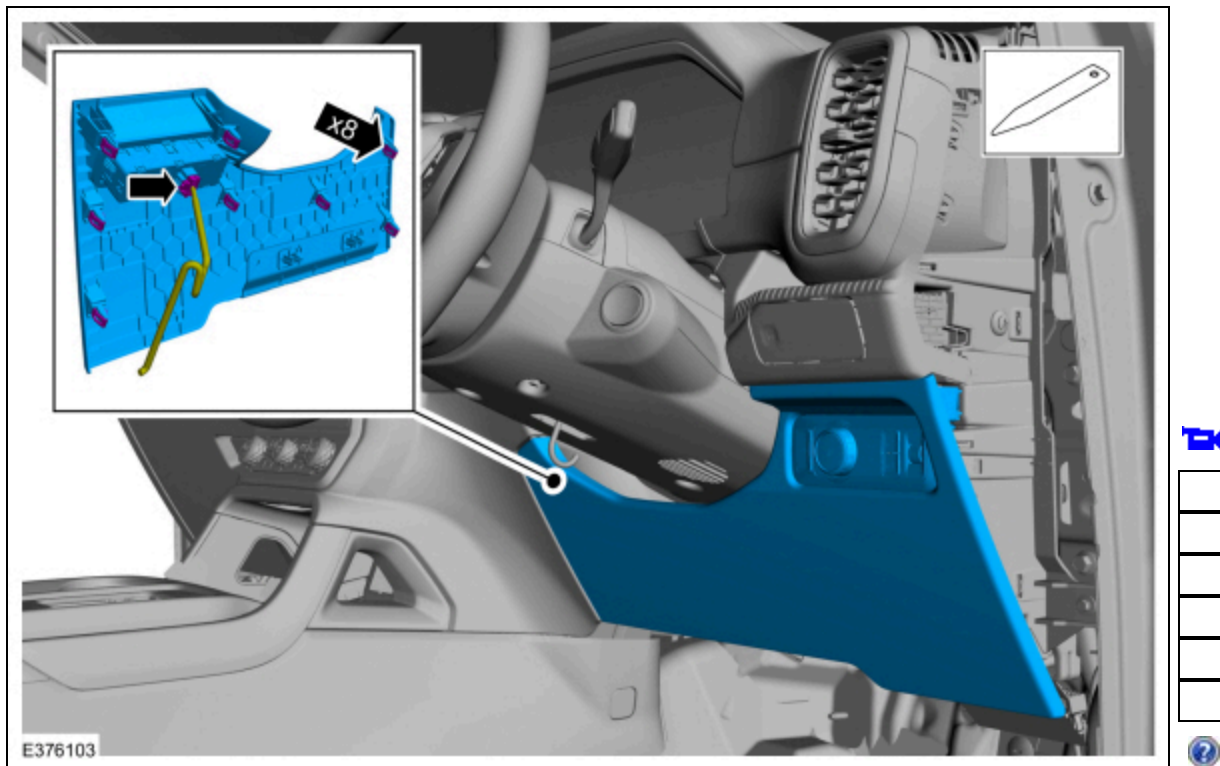

 
7.
 - Disconnect the electrical connector.
 - Release the retainer and position the harness aside.

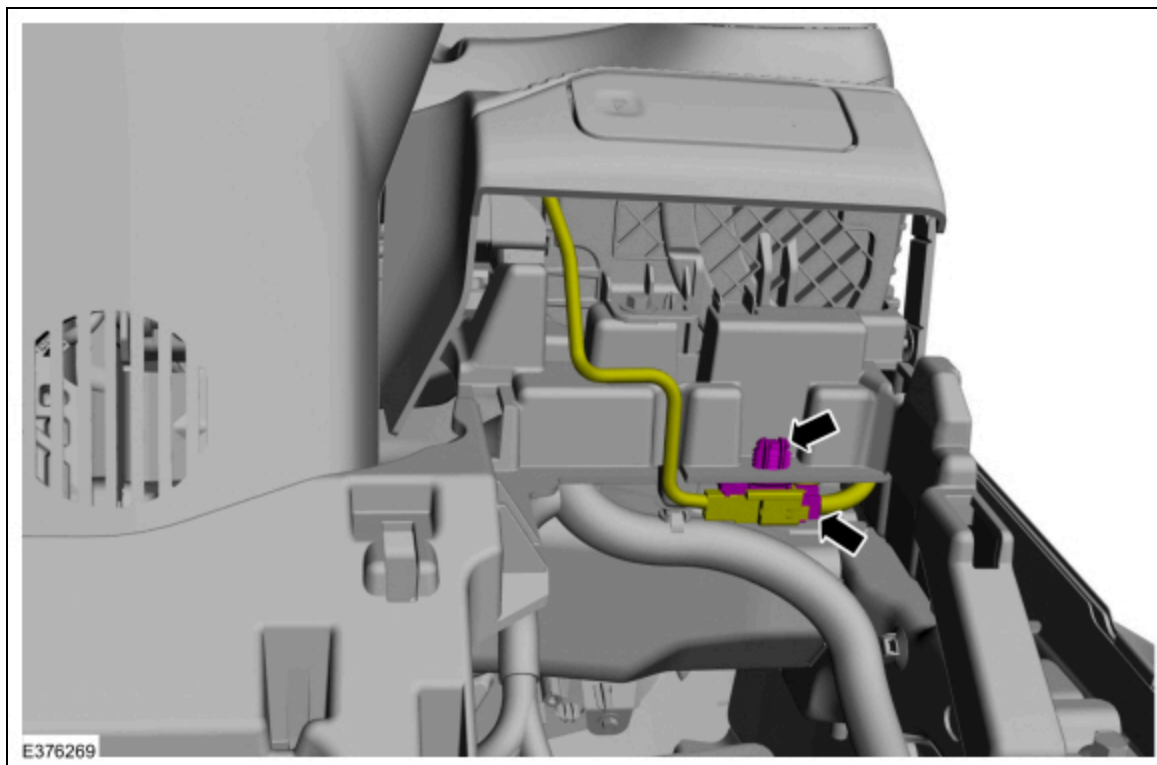

 
8.
 1. Remove the screw.
Torque: 22 lb.in (2.5 Nm)
 2. Release the clips and remove the instrument cluster panel bezel.
Use the General Equipment: Interior Trim Remover

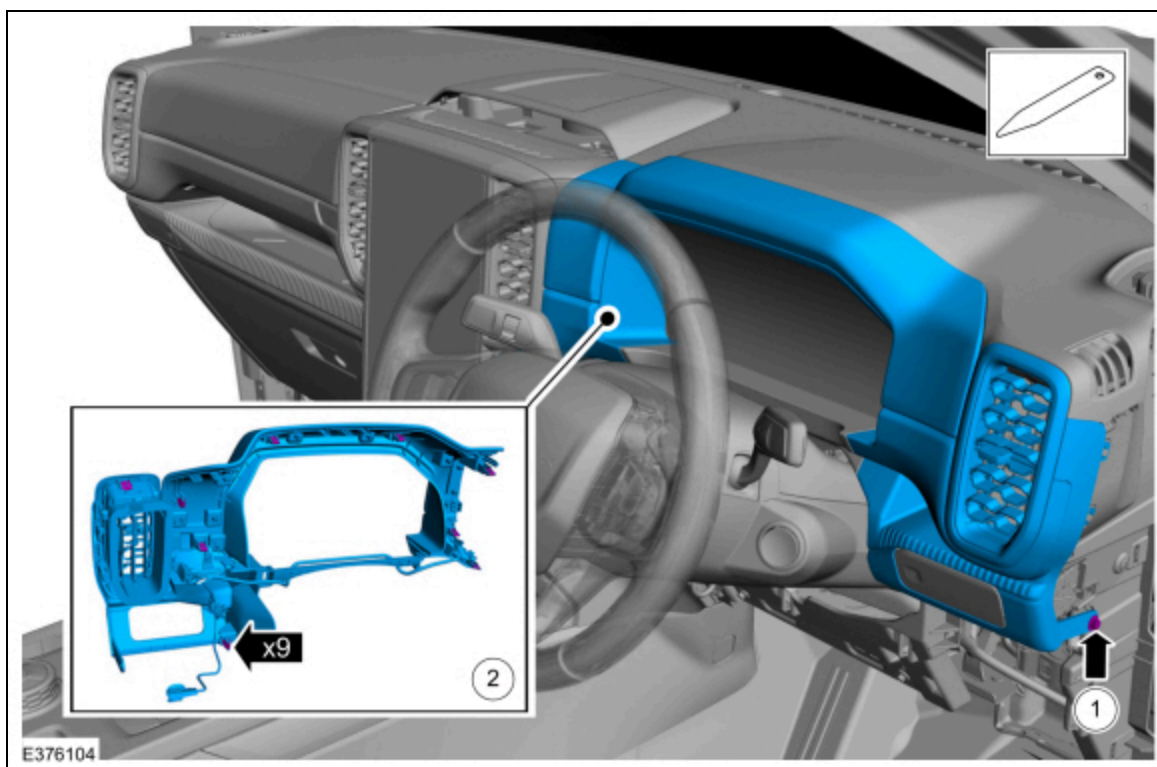


9. Remove the screws.
Torque: 22 lb.in (2.5 Nm)

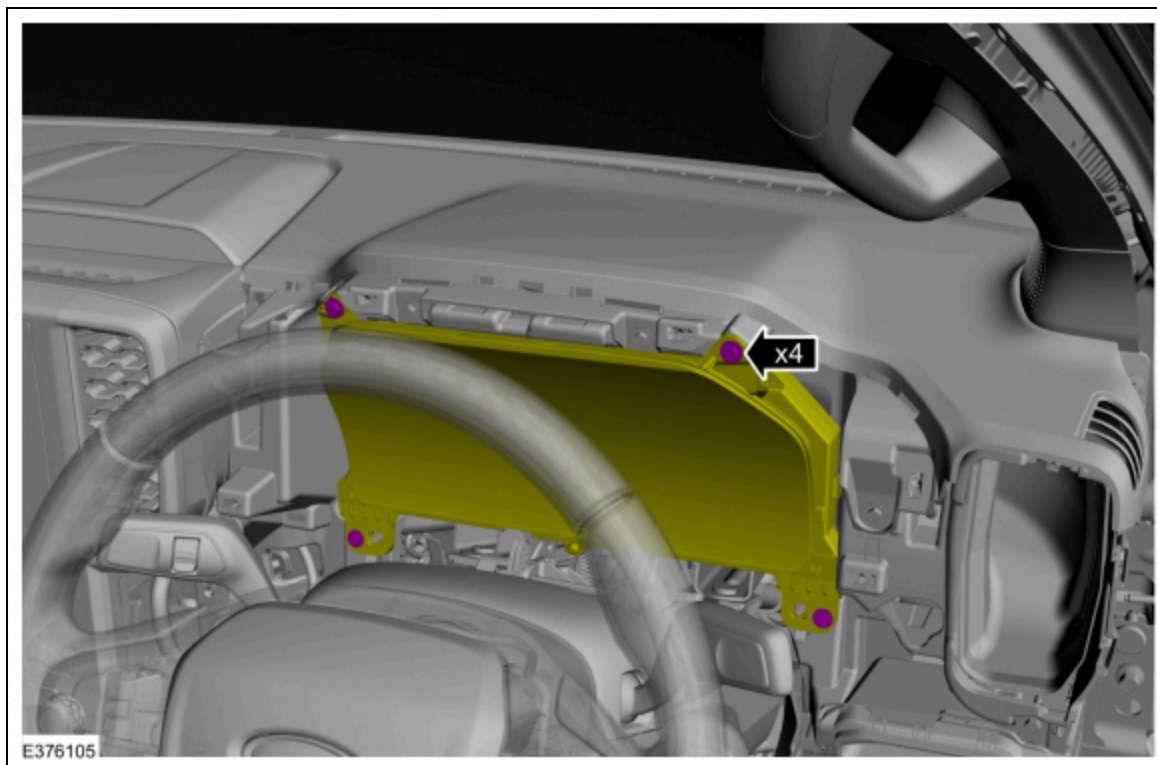

10. If equipped with low series cluster.
Disconnect the electrical connector and remove the IPC .

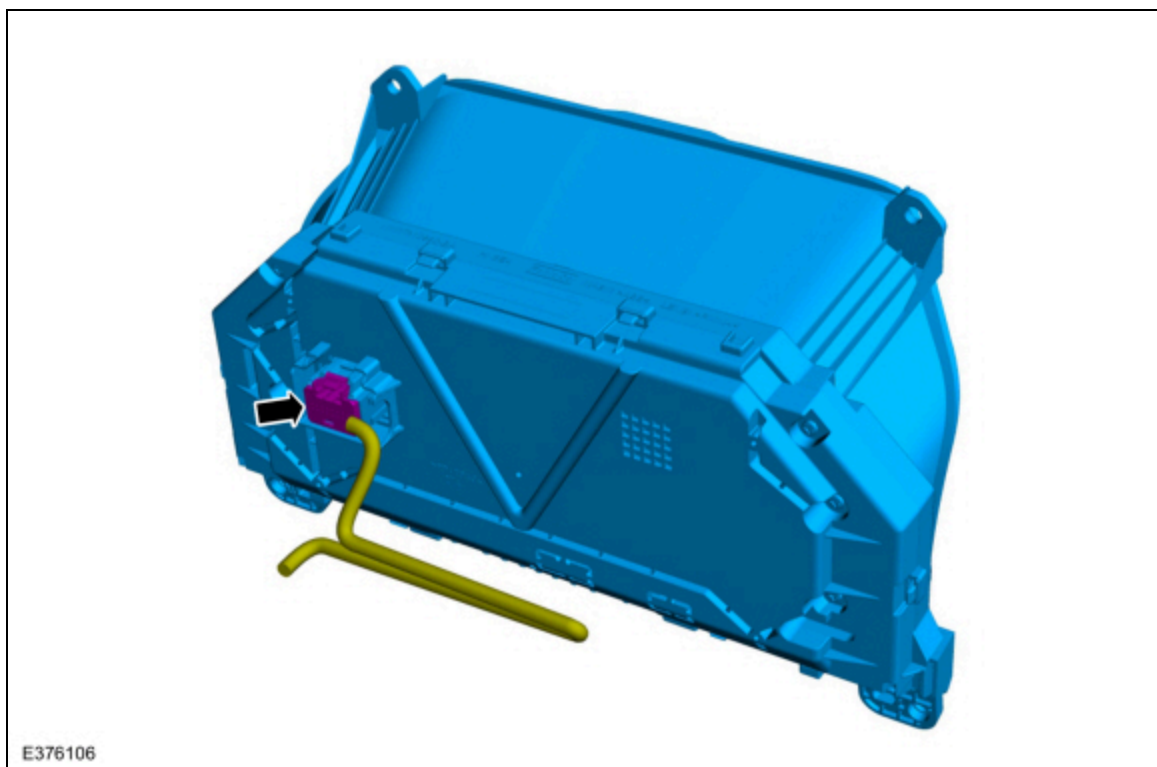

11. If equipped with high series cluster.
Disconnect the electrical connectors and remove the IPC .

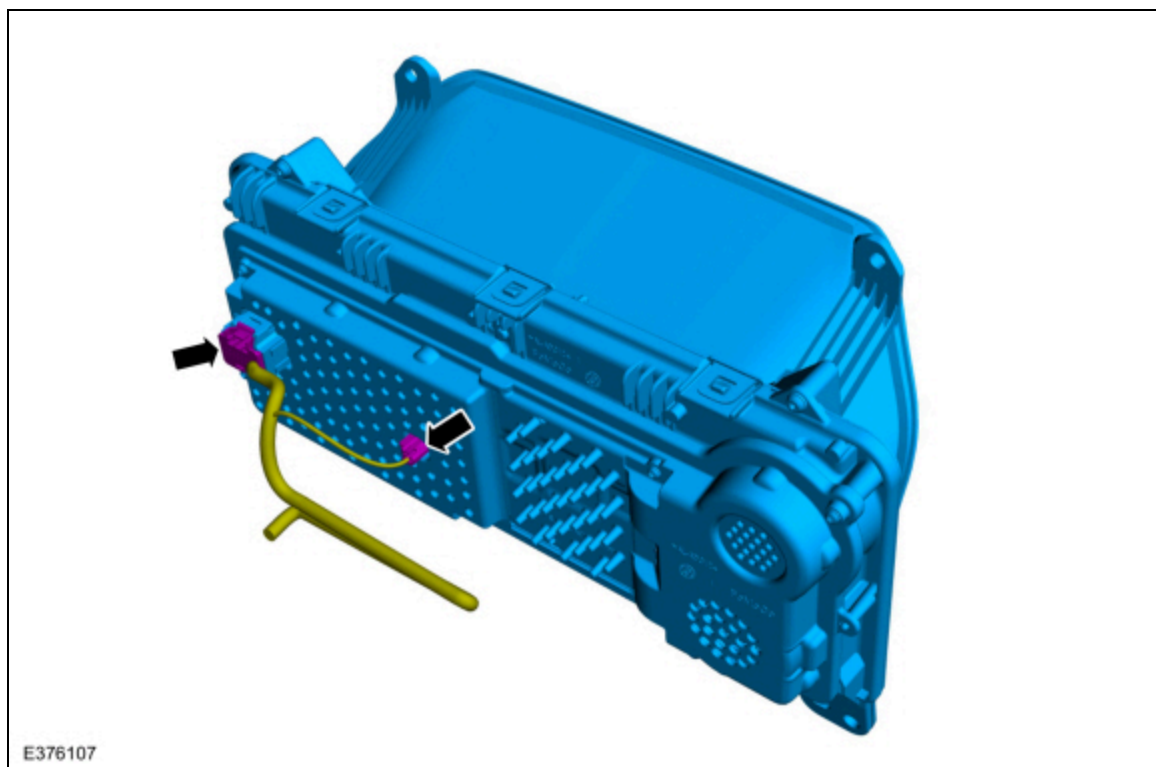



Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI process for the IPC following the on-screen instructions.

© Copyright 2026, Ford Motor Company.
