

BODY CONTROL MODULE (BCM) cont.

Fuse	Amps	Circuits protected
F18	7.5	Upfitter relay box Tachograph
F19	5	Headlamp switch
F20	5	Ignition switch
F21	-	Not used
F22	-	Not used
F23	-	Not used
F24	-	Not used
F25	-	Not used
F26	-	Not used
F27	-	Not used
F28	-	Not used
F29	15	Display unit Tachograph
F30	-	Not used
F31	10	Front Controls Interface Module (FCIM) Radio transceiver module (RTM) Terrain management switch
F32	20	Audio Control Module (ACM)
F33	-	Not used
F34	-	Run/Start relay
F35	-	Not used
F36	15	Parking Aid Module (PAM)
F37	20	Auto-dimming interior mirror Steering Column Control Module (SCCM)
C.B. 38	30	Power windows (1-touch down)