

STEPS TO INSTALL

BLAZE RP24 LED GRILLE LIGHTS (WHITE OR AMBER) FOR FORD RANGER RAPTOR 2022+

1- Locate the Auxiliary switches fuse box on the right hand side of the engine.

2- Locate the Auxiliary harness.



3- Peel off the black sheath to uncover Aux 1 and Aux 2 wires.

Aux 1- Green and Violet

Aux 2- Blue and orange

4- Remove the plastic cover on top of the grille.



5- Using a 4mm drill bit, drill a hole through the grille LED enclosure



6- Feed LED wire into the 4mm hole.



7- Once LED is fitted, use 1× drop of glue on LED top side and secure the led in position



8- Strip down the LEDs from black insulation.

9- Connect Black wires to earth using the crimp Electrical connector into the car earth bolt.



10- Connect Red wires to Aux 1

11- Connect Yellow wires to Aux 2.

12- Use electrical tape to insulation



13- Use the cable ties to tidy up the cables routed into the engine bay.

14- Refit the plastic cover on top of the grille.



DON'T wash your car for 2 hours.

STEPS TO INSTALL- OPTION TWO

BLAZE RP24 LED GRILLE LIGHTS (WHITE OR AMBER) FOR FORD RANGER RAPTOR 2022+

You will need the extra wire and 5amp fuse and adaptor (provided)

Connect the wiring directly to the battery, with the negative wire grounded to the body. This will enable the lights to come on either with the remote start or with manual start. This way you do not need to use your Aux, however you will not be able to turn it on/off as you wish. It will stay on, when the car is on.

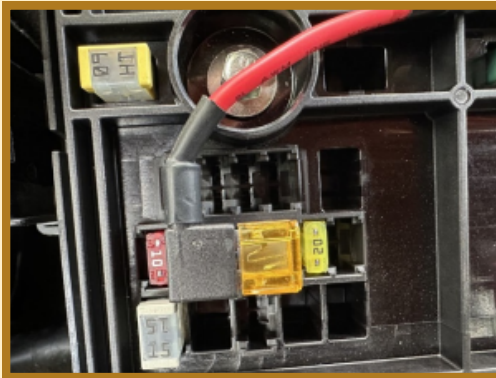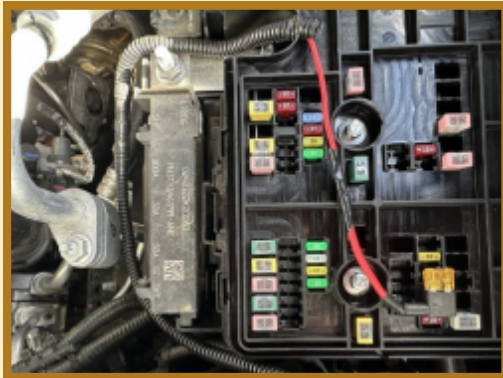

Yellow – Live
Black- Neutral

Fuse Box
Use 5amp Fuse

Ground

