
Cruise Control Module (CCM)

Removal

NOTE: *Removal steps in this procedure may contain installation details.*


Vehicles With Side Vertical Adjustment Screw

1. Remove the CCM cover pin-type retainers and remove the CCM cover.

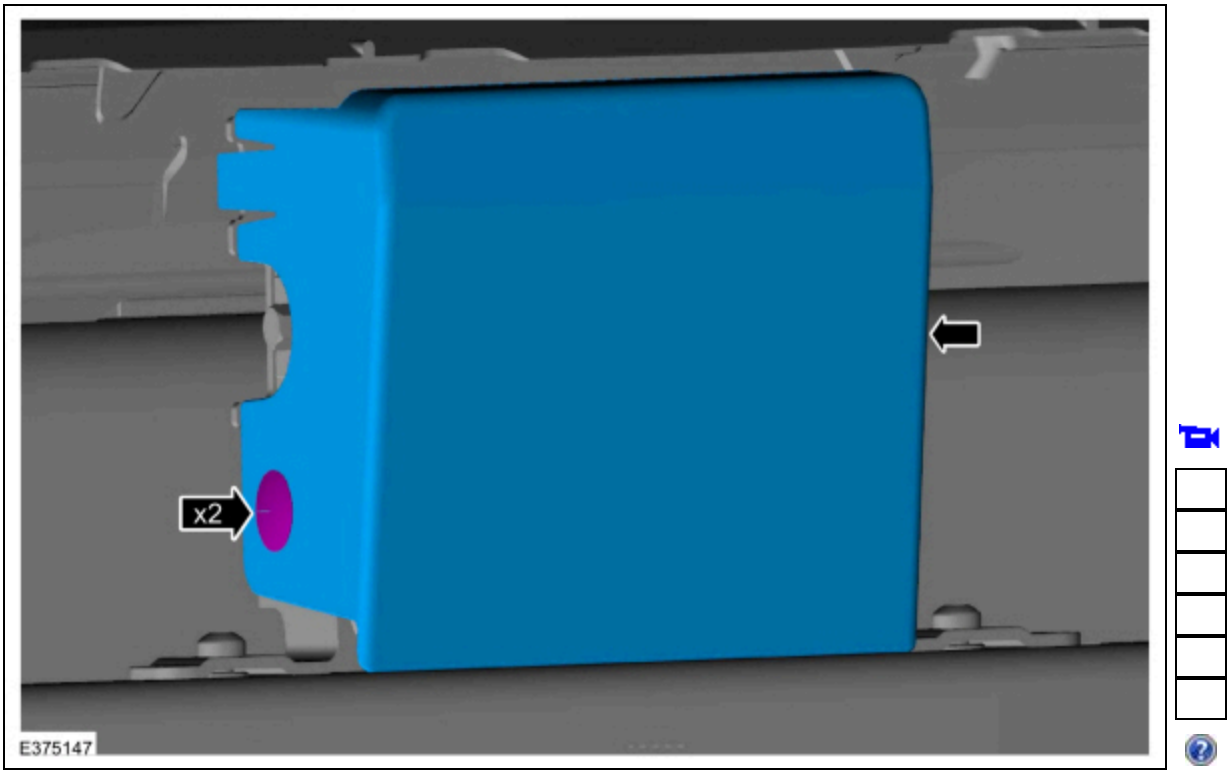


2. **NOTE:** *The front bumper is removed for clarity.*

   Release the clips and slide the CCM up and out of the bracket..

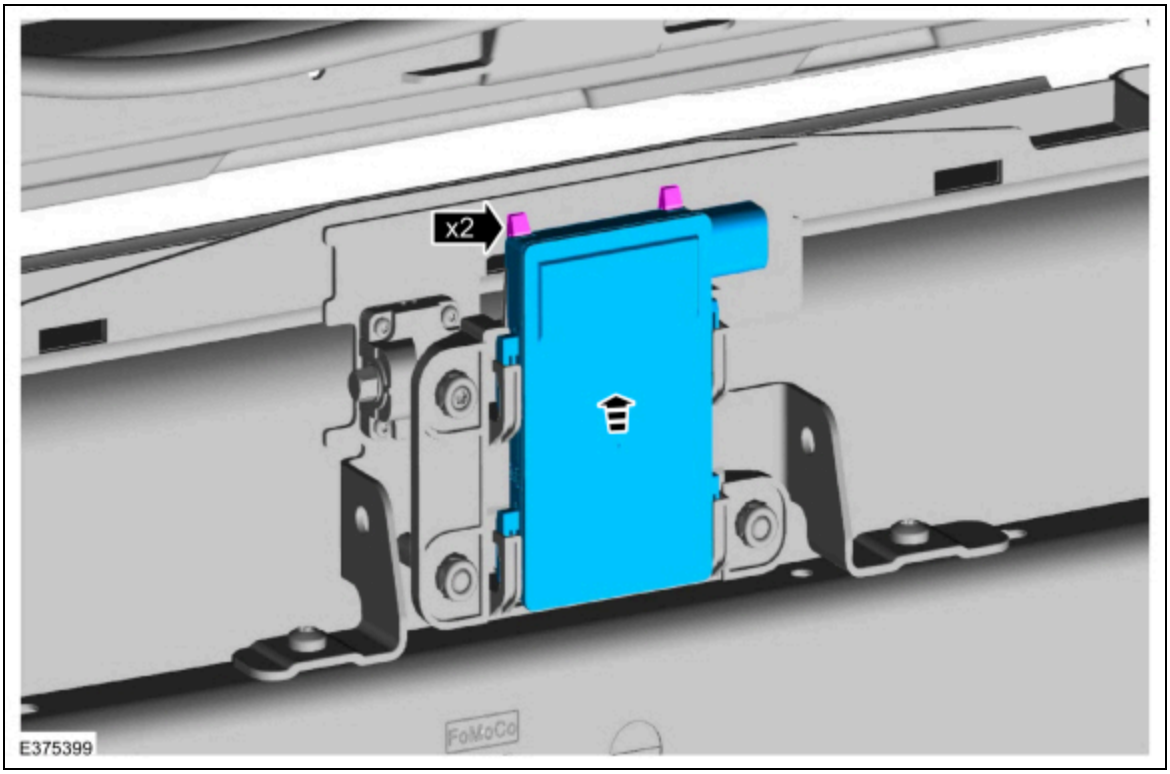


Vehicles With Front Vertical Adjustment Screw

3. If equipped with this type of cover, Remove the CCM cover pin-type retainers and remove the CCM cover.

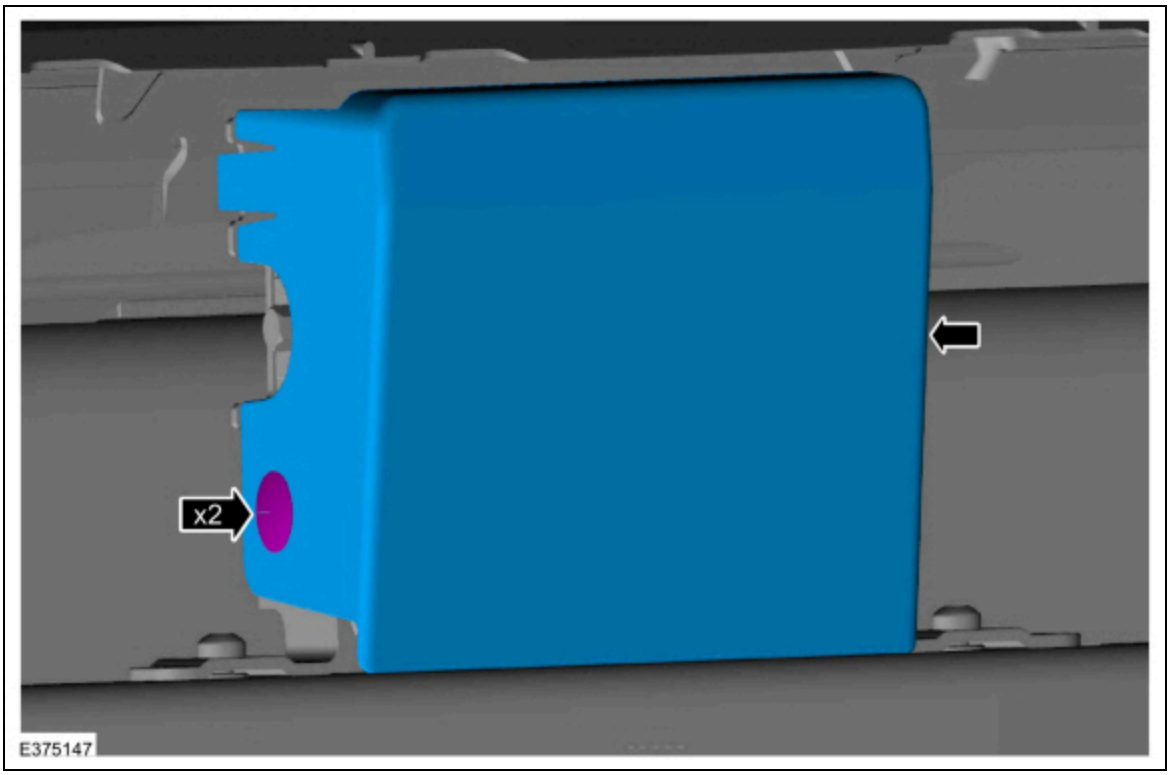


4. If equipped with this type of cover, Release the CCM cover clips and remove the CCM cover.

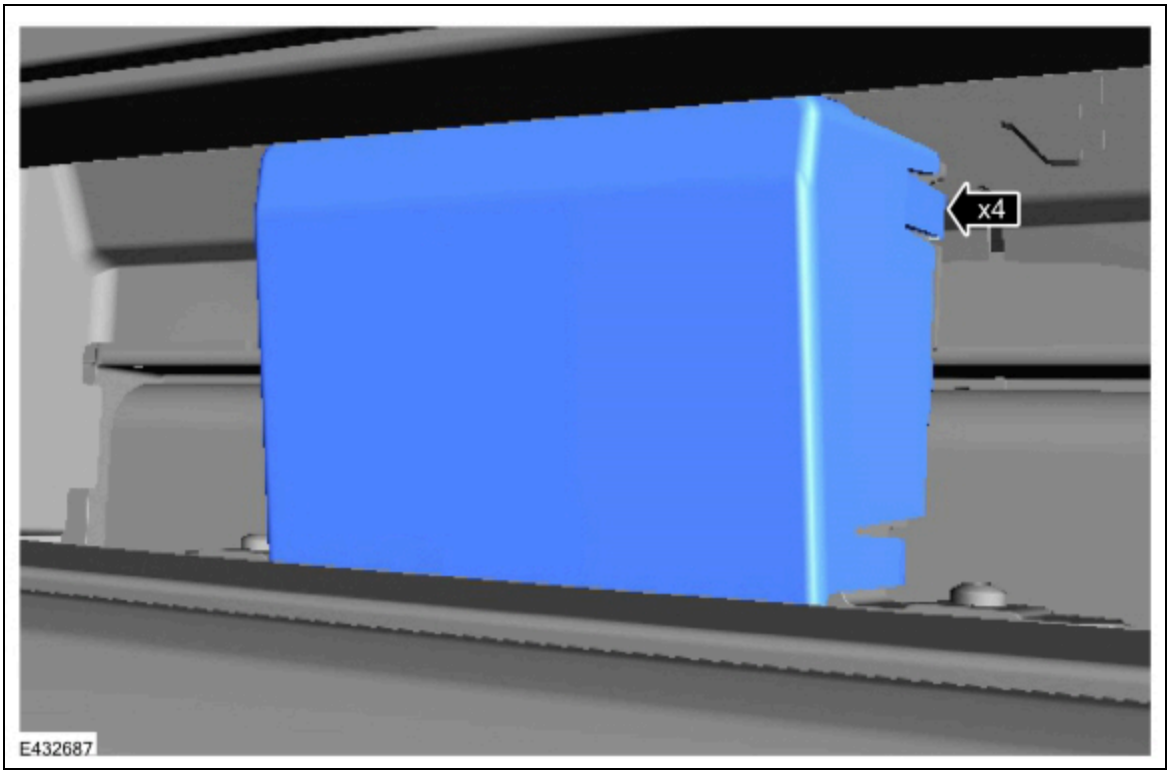

5. **NOTE:** *The front bumper is removed for clarity.*

   Release the clips and slide the CCM up and out of the bracket..

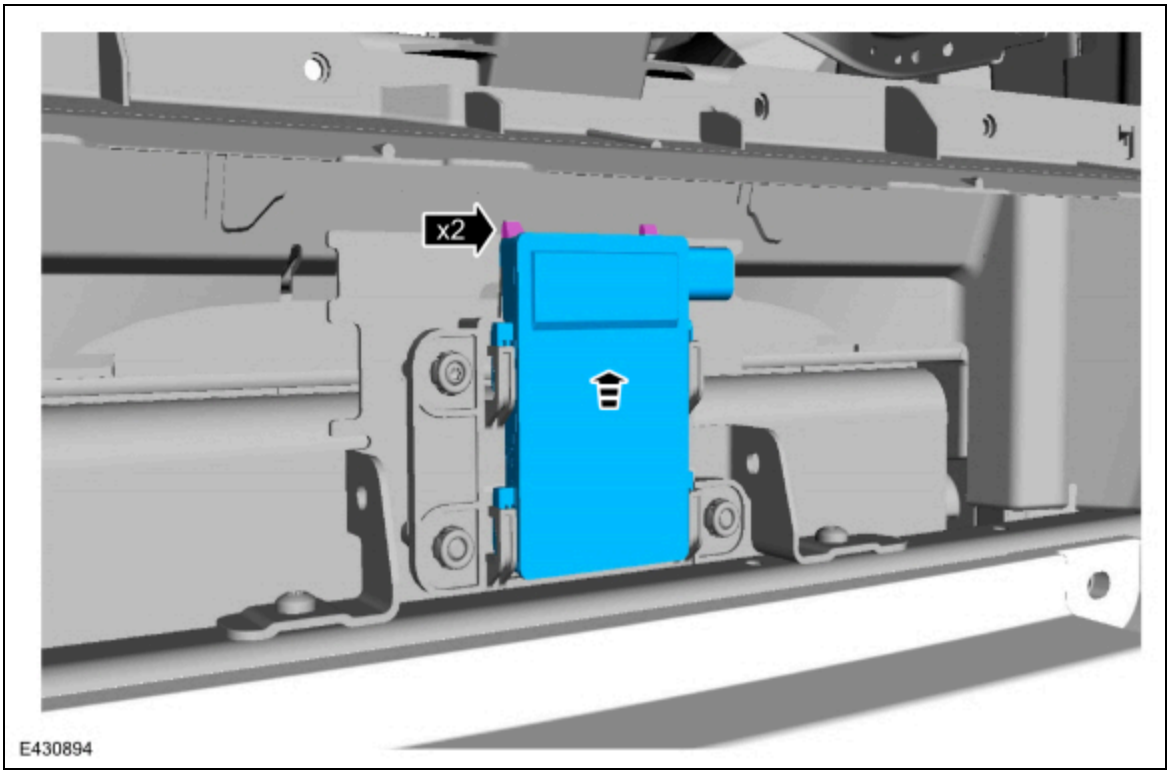

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

   Using a diagnostic scan tool, complete the PMI process for the CCM following the on-screen instructions.

3. Align the CCM .
   Refer to: Cruise Control Radar Alignment (419-03B Cruise Control - Vehicles With: Adaptive Cruise Control With Lane Centering/Adaptive Cruise Control With Stop and Go/Intelligent Adaptive Cruise Control, General Procedures).

© Copyright 2026, Ford Motor Company.